


QuickScreen 3 Cartridge System

the QuickScreen 3 retractable banner stand is equipped with a cartridge system (A)

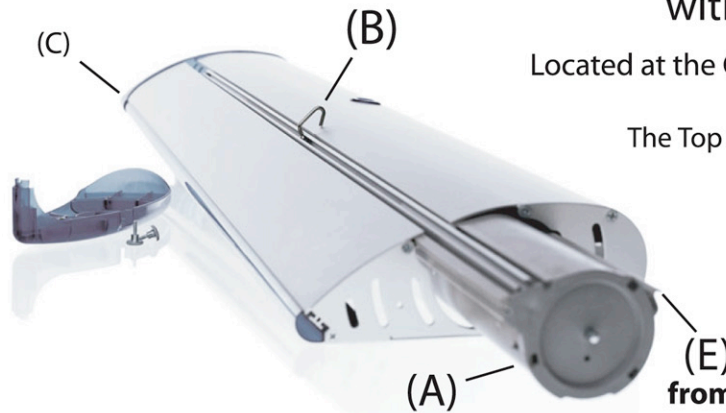

Located at the Center Top Banner Hardware is a Mast Connection Clip (B)
The Top Banner Hardware is connected to the top of your Graphic Banner that retracts into the unit Base (C).

When Cartridge is installed within the Base, the Base prevents the Hardware from retracting fully into the unit and damaging your graphic.

IMPORTANT! When your cartridge is NOT installed into the unit **Do NOT** allow the top hardware bar (D) to retract fully into the cartridge. Avoid Damage to your graphic and hook the Mast Clip (B) onto the cartridge unit guide (E). see figure 1 below.

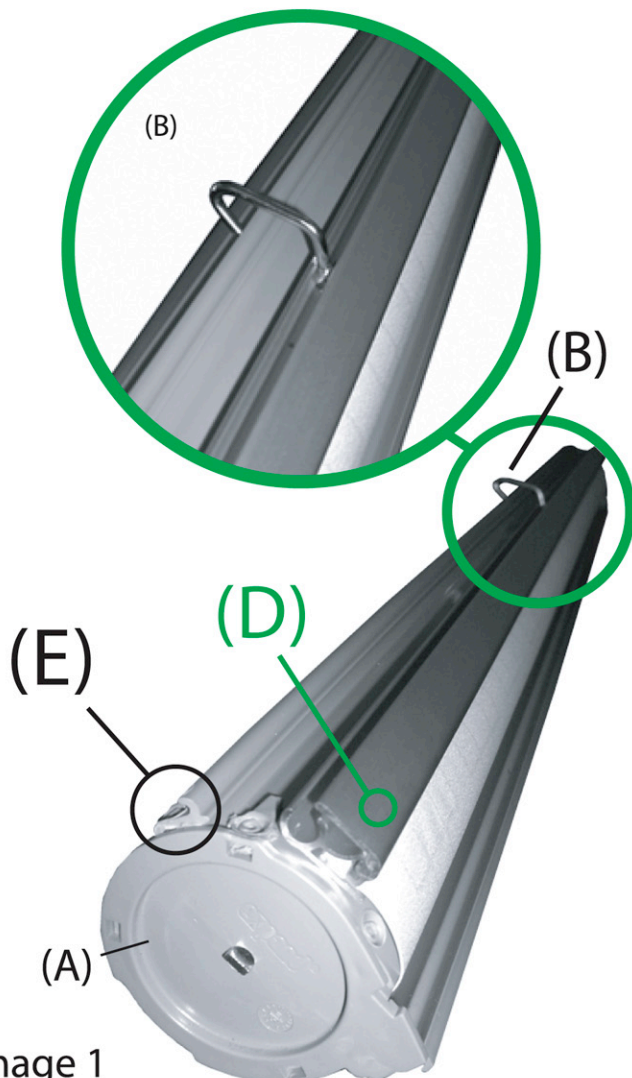


Image 1
CORRECT Connect (B) to Center of (E)


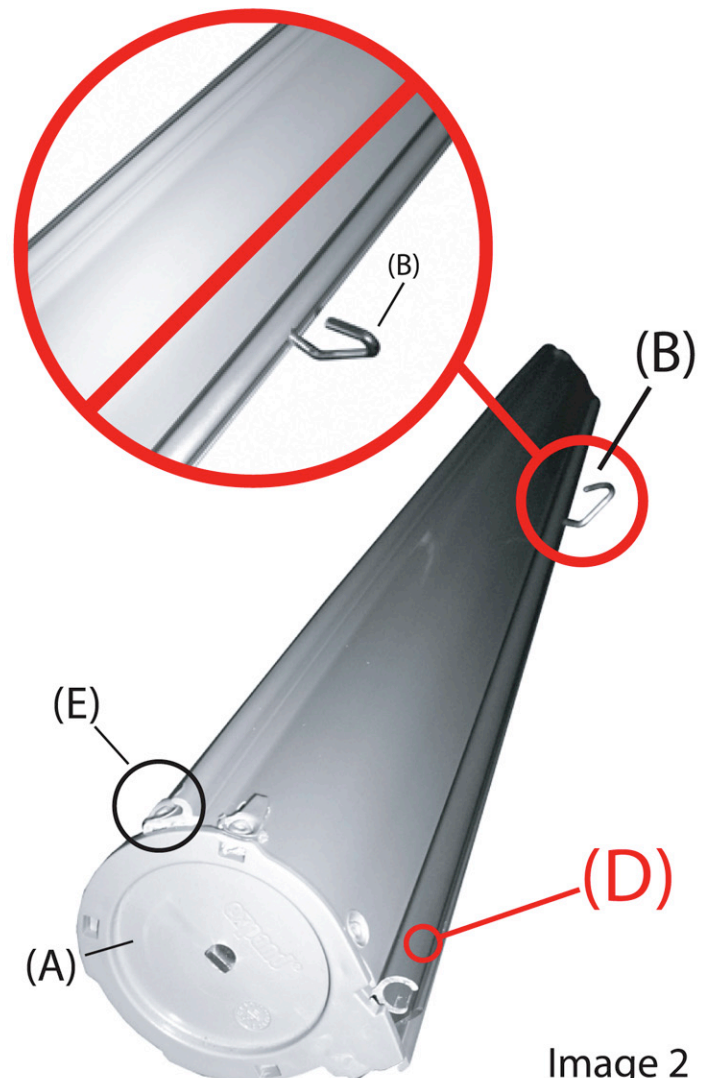


Image 2
INCORRECT Graphic may be damaged

QuickScreen 3 - Change Cassette



1. Turn the Expand QuickScreen 3 upside down. Unscrew the screws.

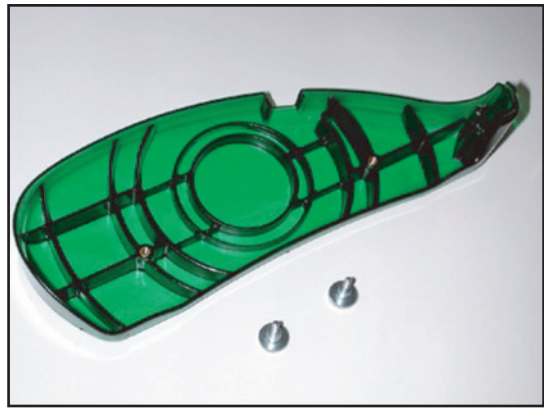

2. Remove the plastic cap.



3. Exchange the cassette and put back the plastic cap.

Done!