

xpressions® 223 Workstation™

Set-up Guide



Slide tube graphic over partially collapsed frame. The front is noted by two screws in the top.



Extend the frame, make sure the magnets connect, and stretch graphic over all corners.



Attach counter top and align holes to match with the top two screws.




Make sure the magnets in back connect to the magnets on the hubs.



Use the supplied thumb-screws to secure top.



Align with the holes in the top and attach monitor mount to the base using supplied wing screws.

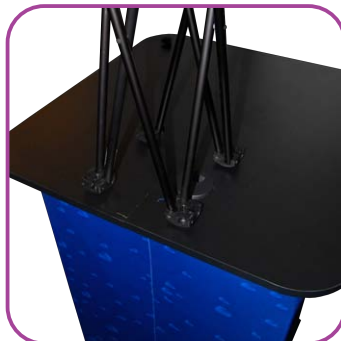

Repeat for all four screws for the monitor mount.




Slide monitor mount graphic over the frame.



Stretch the graphic over all corners.



Secure mount with supplied thumb screws.

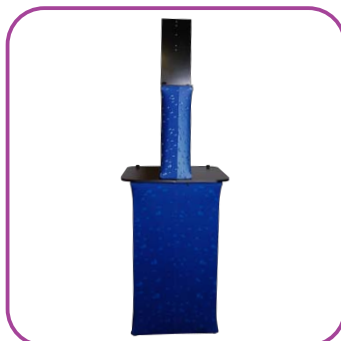

Attach monitor per instructions on your mounting kit.



Monitor Not Included.